



Anderson Instrument Co., Inc.
156 Auriesville Rd.
Fultonville, NY 12072

Phone: 518-922-5315 or 800-833-0081
Fax: 518-922-8997 or 800-726-6733

Startup Guide

Pharmaceutical



“DTG” Digital Temperature Gauge

Style FJ0, FJ1, FJ2, or FJ5


SPECIFICATIONS

Compliance: 3-A, NEMA 4X, IP-66
 Product Contact Material: Fitting & Probe: 316L SS
 Product Contact Finish: R_a max = 8 micro inches, Electropolished
 Non-Product Contact Surface: Housing - 304 SS
 Lens - Polysulfone
 Process Temp. Range: 0 to 300°F (-18 to 150°C)
 Units: Deg F and Deg C; field selectable
 Resolution: 0.1°F or °C
 Accuracy: +/- .75°F (+/-0.4°C)
 Repeatability: +/-0.2% of full scale (+/-0.6°F)
 Ambient Operating Limits: 40 to 140°F (4.4 to 60°C)
 Ambient Temp. Stability: Better than 0.1°C per 10°C ambient shift
 Storage Temp.: 32 to 140°F (0 to 65°C)

Display: LCD: 4 digit main display, 6 digit secondary; 0.9" high contrast LCD
 Internal Switch Rating: 1 amp at 24 VDC SPST
 Remote Relay Rating: 6 amp at 250 VAC SPDT
 Power: 2 AA Industrial Grade Batteries (Style 0,1,5)
 9-30V DC external supply (Style 2)
 Battery Life: Style 0,1,5: 12 month minimum
 Style 2: Externally powered
 Vibration: 10 to 60 Hz, 2g
 Warranty: 2 year
 Secondary Output: Additional 100 ohm RTD, 3 wire
 DIN, wire via quick disconnect fitting (Style 1)
 Display Update: 3 seconds
 Calibration Adjustment: Via onboard switches

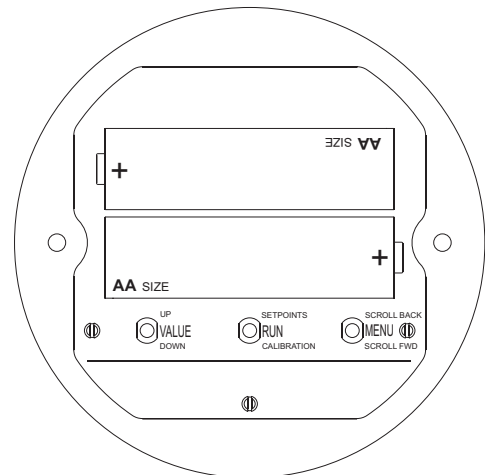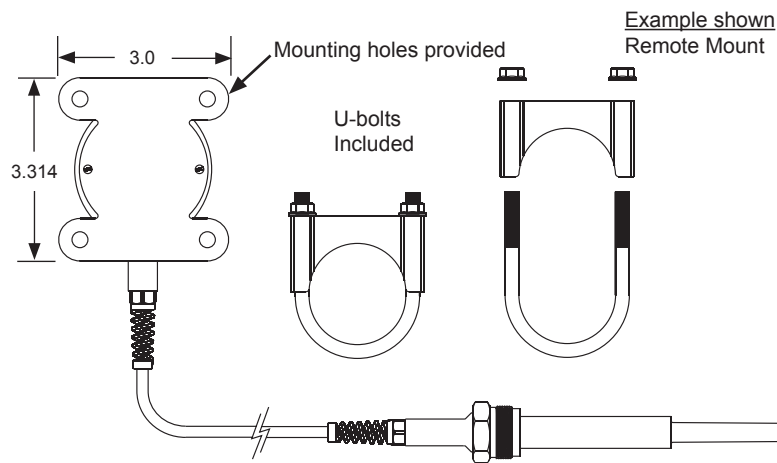

NOTE:
Remove back plate to access Value, Run, and Menu keys used for programming.

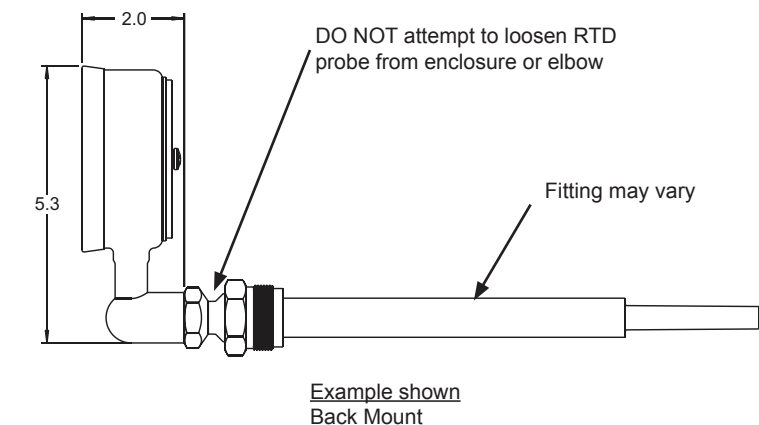


Battery Replacement

A three segment battery indicator allows the operator to monitor battery life of the DTG, and plan ahead for a battery change. When a low threshold is reached, the final indicator bar blinks on and off. Internal circuitry regulates battery voltages to ensure all factory specifications are met, even with a decrease in battery voltage. When an unacceptable level is reached, the DTG will shut down. Internal flash memory retains all prior calibration, and only replacement of the batteries is required to resume operation. Units with optional AC switch module do not require batteries.


Full Battery	
Decreased Battery	
Low Battery (blinks between first and second)	

NOTE: When removing batteries, wait a minimum of (2) two minutes before re-installing.

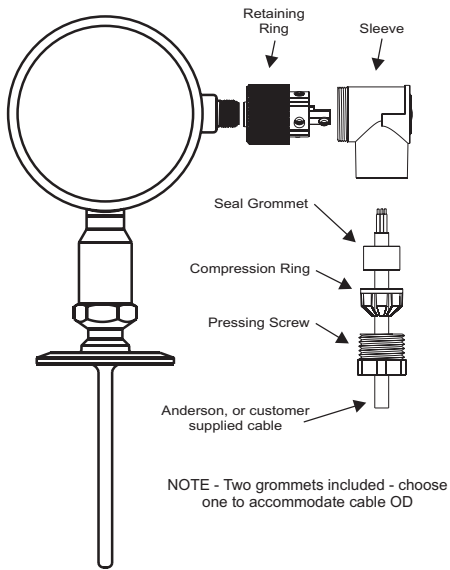


DTG Model "FJ1" - Secondary RTD Wiring

Wiring Diagram - 3 WIRE RTD

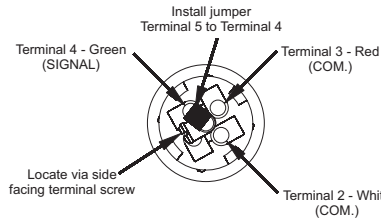

(NOTE: Anderson color codes indicated)


Wiring Diagram - 4 WIRE RTD

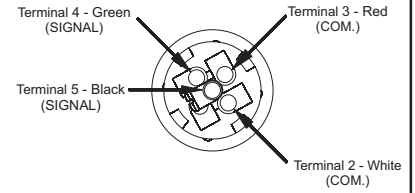

(NOTE: Anderson color codes indicated)

DTG Model "FJ2" - Switch Wiring

Wiring Diagram - Utilizing on-board switching only

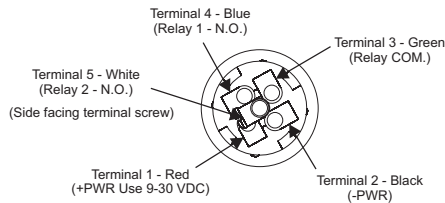


(NOTE: Anderson color codes indicated)

External DC supply must be used in order to utilize on-board switching


9-30 VDC, 250 mA typical external power required to energize relays

N.O. Relay contacts rated for 1 amp max @ 24 VDC

If customer supplied, cable requirements are:
5 conductor, stranded, 18-24 AWG.
0.16" to 0.31" Cable Sheath O.D.

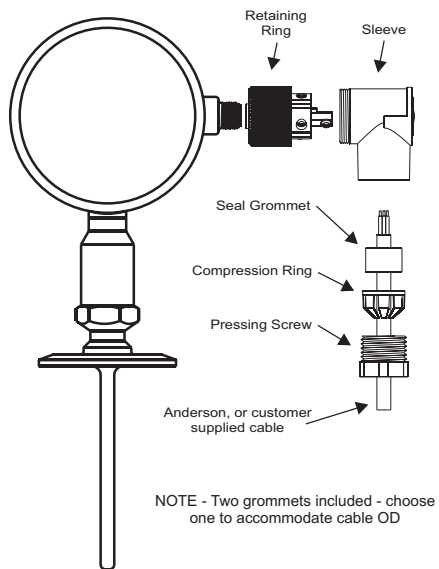

Wiring Diagram - Utilizing "Optional" external AC powered switch module

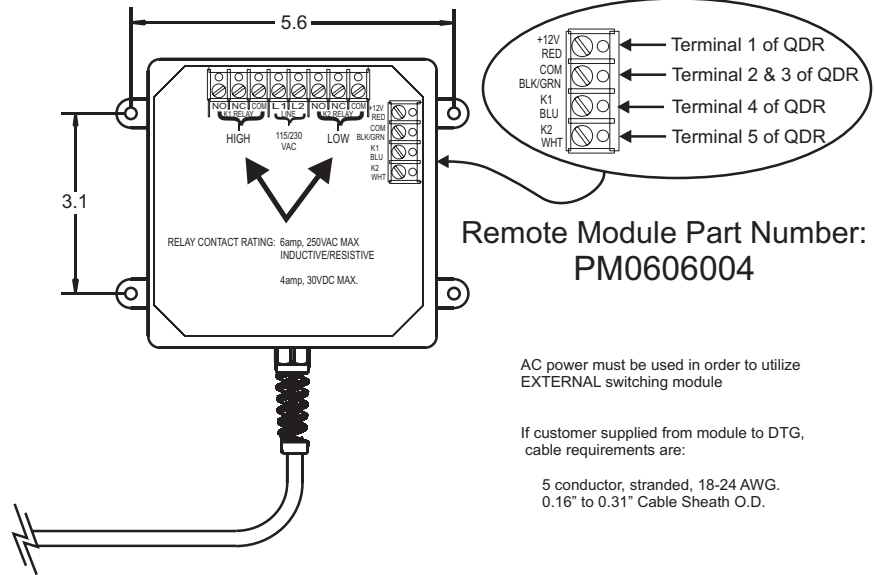




Change Offset Value

The "Offset Value" function is used to apply a linear offset factor to the device. If your DTG shows a repeatable discrepancy (less than 1 degree) throughout the test range, this function may be used to remove the differential.

Example: Reference reads 32.0°F and DTG reads 32.3°F
 Reference reads 150.0°F and DTG reads 150.3°F
 Reference reads 212.0°F and DTG reads 212.3°F







"Offset Value" of "-0.3°F" programmed will remove discrepancy

CAUTION: Be sure to use only a NIST traceable reference thermometer that is known accurate, and within its specified calibration period.

1.	Flip Run switch to the down position.	
2.	Press Menu switch up and release once to go to <i>Offset</i> screen.	
3.	Use Value switch to set <i>Offset</i> from 0.0 to +/-5.0.	
4.	Flip Run switch to the middle position.	




Restore Factory Settings

The "Restore Factory Settings" function will return the DTG to the factory shipped calibration.

1.	Flip Run switch to the down position.	
2.	Press Menu switch down and release once to go to <i>Unit</i> screen.	
3.	Press Menu switch down and release once to go to <i>Dampening Factor</i> screen.	
4.	Press Menu switch down and release once to go to <i>Decimal Position</i> screen.	
5.	Press Menu switch down and release once to go to <i>Factory Reset</i> screen.	
6.	Hold Value switch up for 5 seconds to restore factory settings.	
7.	Flip Run switch to middle position.	






Change Unit of Measure

The DTG may be programmed to read in either Degrees F or Degrees C. When changing from one mode to another, any "User Calibration" points are converted automatically to their respective unit of measure – no additional programming is required.

1.	Flip Run switch to the down position.	
2.	Press Menu switch down and release once to go to <i>Unit</i> screen.	
3.	Use Value switch to alternate between °F and °C.	
4.	Flip Run switch to the middle position.	

Change Decimal Position





The DTG is capable of displaying to the nearest WHOLE DEGREE, or with the addition of a decimal point, to the NEAREST TENTH degree. Modifying this parameter requires no additional programming changes to "User Calibration" points.

1.	Flip Run switch to the down position.	
2.	Press Menu switch down and release once to go to <i>Unit</i> screen.	
3.	Press Menu switch down and release once to go to <i>Dampening Factor</i> screen.	
4.	Press Menu switch down and release once to go to <i>Decimal Position</i> screen.	
5.	Use Value switch to alternate select decimal position.	
6.	Flip Run switch to middle position.	

WHOLE DEGREE display will ROUND DOWN to previous whole number.
 Example: Process = 181.9 deg F Display = 181 deg F

Change Dampening Factor

The "Dampening Factor" is used as a means to slow down the reaction rate of the unit. Under most circumstances, this value should be set to "0." If a process has very erratic temperature shifts, and the display fluctuates, introduction of a small dampening factor may smooth display.

1.	Flip Run switch to the down position.	
2.	Press Menu switch down and release once to go to <i>Unit</i> screen.	
3.	Press Menu switch down and release once to go to <i>Dampening Factor</i> screen.	
4.	Use Value switch to set <i>Dampening Factor</i> from 0.0 to 10.0.	
5.	Flip Run switch to middle position.	

Change Alarm 1 Setpoint

1.	Flip Mode switch to the up position.	
2.	Use the Value switch to set the Setpoint.	
3.	The value of Alarm 1 Setpoint is saved after the Mode switch is returned to the middle position.	

Change Alarm 1 Action

1.	Flip Mode switch to the up position.	
2.	Press the Menu switch down and release once to go to <i>Alarm 1 Action</i> screen.	
3.	Use the Value switch to set the Action to either HI, LO or OFF.	
4.	The value of Alarm 1 Action is saved after the Mode switch is returned to the middle position.	

Change Alarm 2 Setpoint

1.	Flip Mode switch to the up position.	
2.	Press the Menu switch down and release once to go to <i>Alarm 1 Action</i> screen.	
3.	Press the Menu switch down and release once to go to <i>Alarm 1 Hysteresis</i> screen.	
4.	Press the Menu switch down and release once to go to <i>Alarm 2 Setpoint</i> screen.	
5.	Use the Value switch to set the Setpoint.	
6.	The value of Alarm 2 Setpoint is saved after the Mode switch is returned to the middle position.	

Change Alarm 1 Hysteresis

1.	Flip Mode switch to the up position.	
2.	Press the Menu switch down and release once to go to <i>Alarm 1 Action</i> screen.	
3.	Press the Menu switch down and release once to go to <i>Alarm 1 Hysteresis</i> screen.	
4.	Use the Value switch to set the Hysteresis.	
5.	The value of Alarm 1 Hysteresis is saved after the Mode switch is returned to the middle position.	

Change Alarm 2 Action

1.	Flip Mode switch to the up position.	
2.	Press the Menu switch down and release once to go to <i>Alarm 1 Action</i> screen.	
3.	Press the Menu switch down and release once to go to <i>Alarm 1 Hysteresis</i> screen.	
4.	Press the Menu switch down and release once to go to <i>Alarm 2 Setpoint</i> screen.	
5.	Press the Menu switch down and release once to go to <i>Alarm 2 Action</i> screen.	
6.	Use the Value switch to set the Action to either HI, LO or OFF.	
7.	The value of Alarm 2 Action is saved after the Mode switch is returned to the middle position.	

Change Alarm 2 Hysteresis

1.	Flip Mode switch to the up position.	
2.	Press the Menu switch down and release once to go to <i>Alarm 1 Action</i> screen.	
3.	Press the Menu switch down and release once to go to <i>Alarm 1 Hysteresis</i> screen.	
4.	Press the Menu switch down and release once to go to <i>Alarm 2 Setpoint</i> screen.	
5.	Press the Menu switch down and release once to go to <i>Alarm 2 Action</i> screen.	
6.	Press the Menu switch down and release once to go to <i>Alarm 2 Hysteresis</i> screen.	
7.	Use the Value switch to set the Hysteresis.	
8.	The value of Alarm 2 Hysteresis is saved after the Mode switch is returned to the middle position.	